



# 14. EXPLODED VIEWS AND PARTS LIST

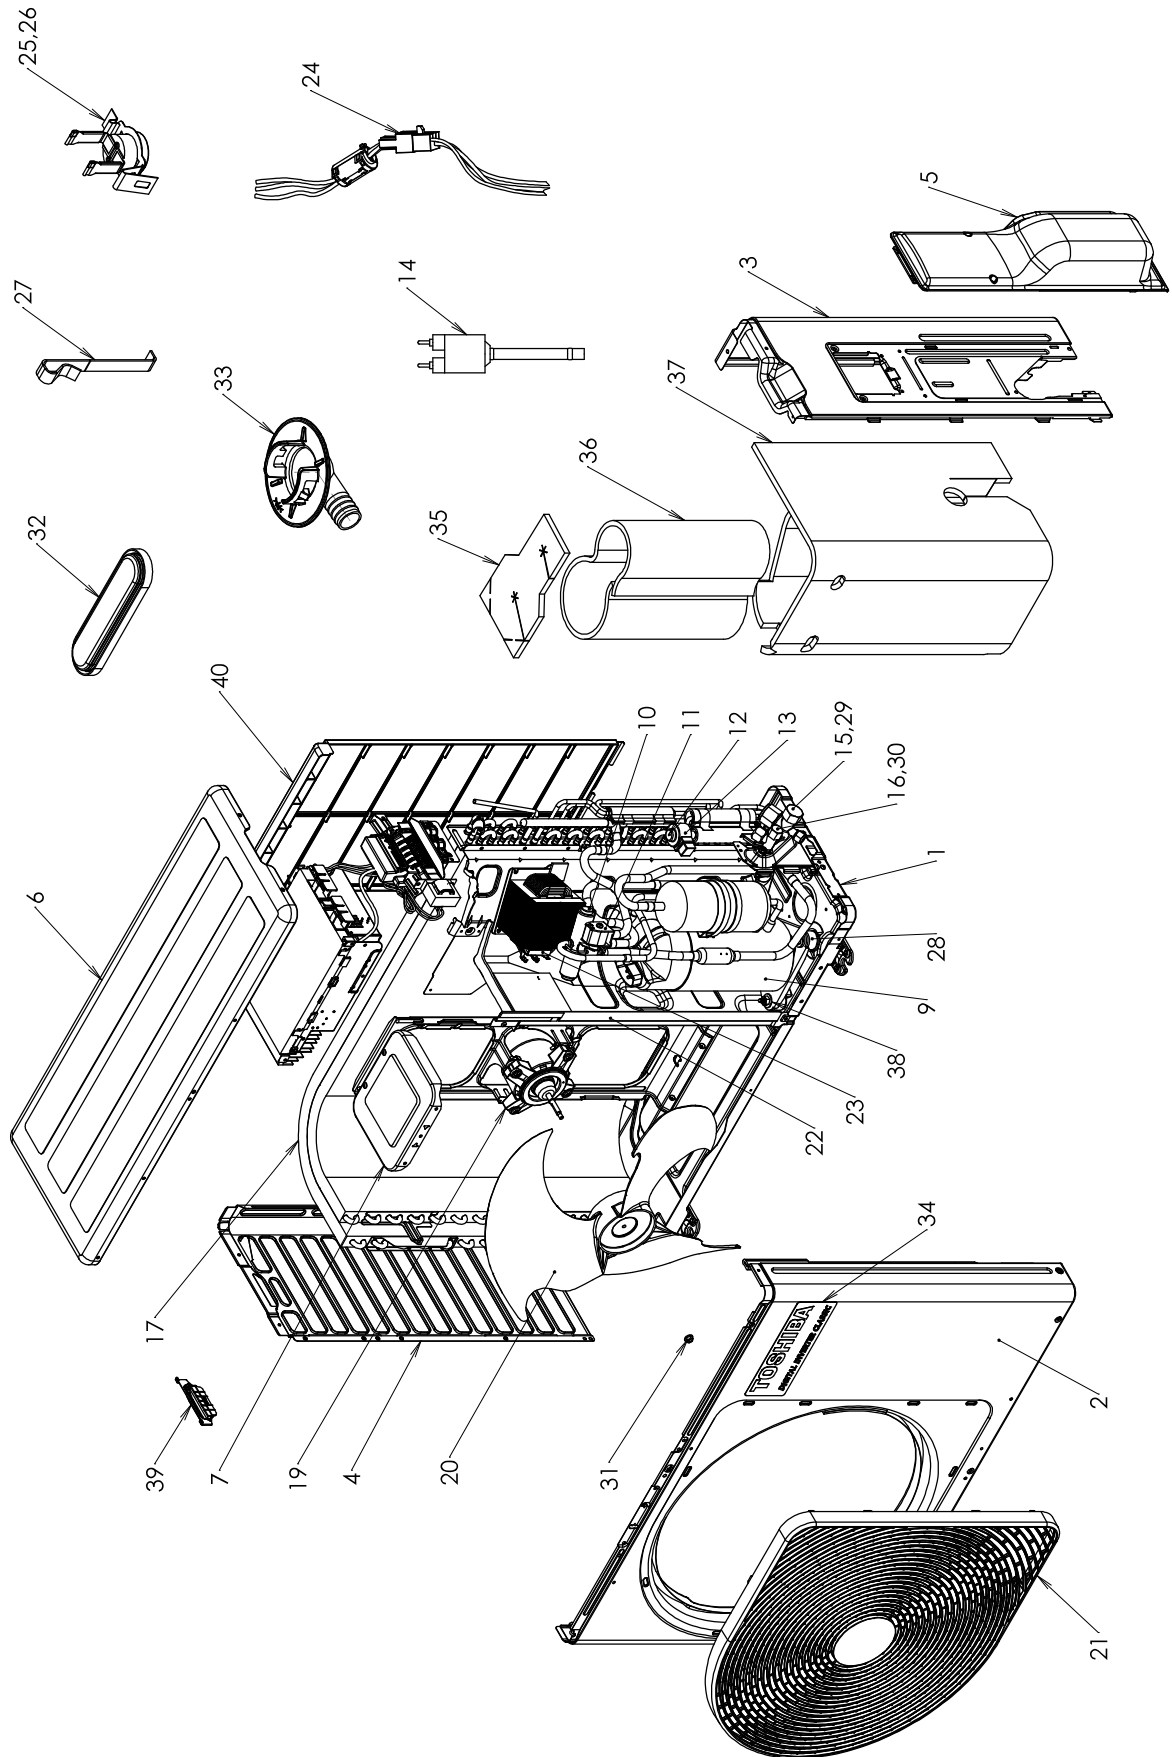

Location No.	Part No.	Description	Model name	
			RAV-GV1101ATP-E	RAV-GV1101ATP-TR
1	43T42383	BASE PLATE ASSEMBLY	1	1
2	43T00792	ASM-CABI-FRONT	1	1
3	43T00763	RIGHT SIDE CABINET ASSEMBLY	1	1
4	43T00747	ASM-COAT-C-S-L	1	1
5	43T00762	PACKED-VALVE COVER ASSEMBLY	1	1
6	43T00789	ASM-COAT-CABI-UP	1	1
7	43T39410	ASM-MOTOR-BASE-COAT	1	1
9	43T41551	COMPRESSOR	1	1
10	43T46424	4 WAY VALVE	1	1
11	43046571	COIL-V-3WAY	1	1
12	43T46389	BODY-PMV	1	1
13	43T63338	COIL-PMV	1	1
14	43T63373	SWITCH PRESSURE	1	1
15	43T46508	VALVE; PACKED 15.88 DIA	1	1
16	43T46380	VALVE;PACKED 9.52 DIA	1	1
17	43T43631	ASM-COND	1	1
19	43T21498	MOTOR FAN COAT	1	1
20	43T20331	PROPELLER FAN	1	1
21	43T19371	FAN GUARD	1	1
22	43T04438	GUIDE WIND PARTITION	1	1
23	43058305	REACTOR	1	1
24	43T60439	ASM-COMP-LEAD	1	1
25	43T54319	BIMETAL-THERMO	1	1
26	43T50307	HOLDER-THERMO	1	1
27	43T19333	HOLDER, SENSOR	1	1
28	43T49335	RUBBER CUSHION	3	3
29	43T47410	BONNET (15.9D)	1	1
30	43T47404	BONNET, 9.52 DIA	1	1
31	43047669	NUT, FLANGE	1	1
32	43089160	CAP, WATERPROOF	2	2
33	43T79325	DRAIN NIPPLE	1	1
34	43T85893	MARK-T	1	1
35	43T04372	S-INSU(UP)	1	1
36	43T04357	SOUND INSULATION(IS)	1	1
37	43T04373	SOUND-INSU(OS)	1	1
38	43T97001	NUT	1	1
39	43T19360	HANDLE	1	1
40	43T19351	FIN GUARD	1	1

## <Inverter assembly>

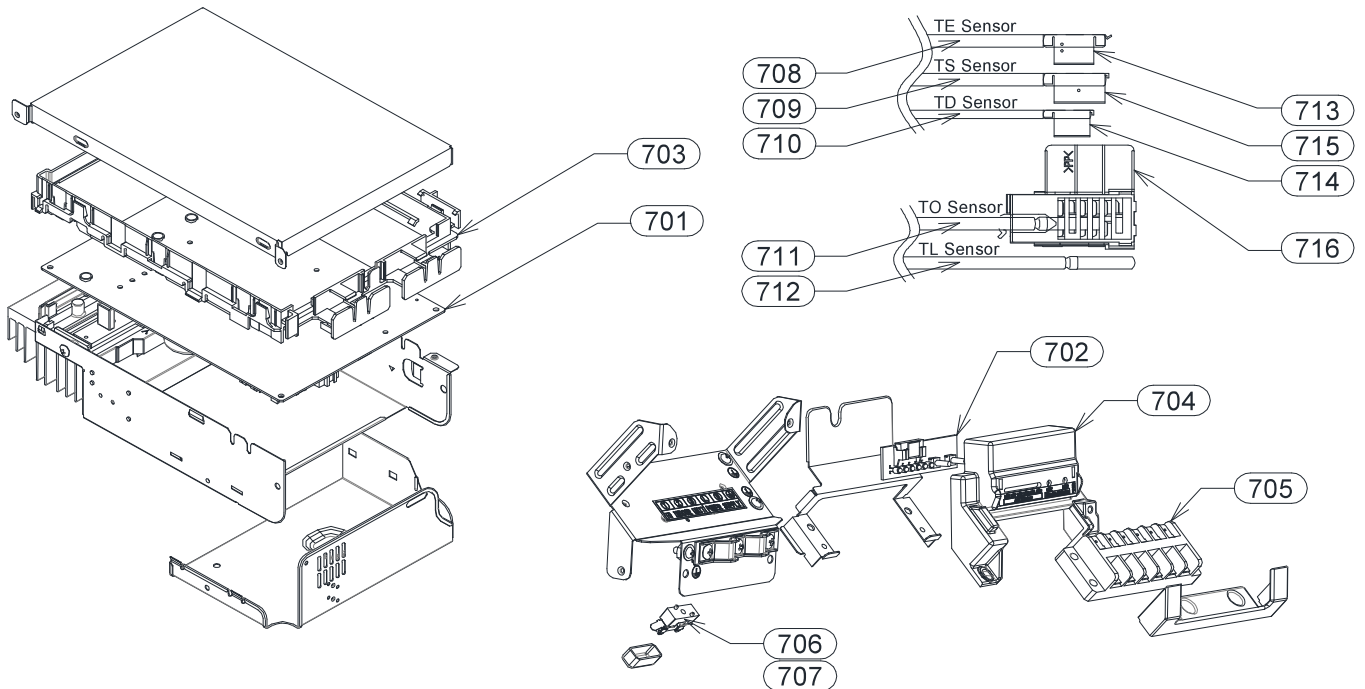

Location No.	Part No.	Description	Model name	
			RAV-GV1101ATP-E	RAV-GV1101ATP-TR
701	43TN9692	PC BOARD ASSY, MCC-1768	1	1
702	43T6W816	PC BOARD ASSY (MCC-1646)	1	1
703	43T62313	PC PLATE BASE	1	1
704	43T61320	BASE, PC BOARD	1	1
705	43T60423	SERV-TERMINAL	1	1
706	43T60463	FUSE(FJL)	1	1
707	43T60564	HOLDER-FUSE	1	1
708	43T50352	TEMPERATURE SENSOR	1	1
709	43T50412	TC-SENSOR	1	1
710	43T50346	TEMPERATURE SENSOR	1	1
711	43T50417	TEMPERATURE SENSOR, TO	1	1
712	43T50335	TEMPERATURE SENSOR	1	1
713	43T63318	HOLDER SENSOR	1	1
714	43T63317	HOLDER,SENSOR	1	1
715	43T63323	HOLDER,SENSOR	1	1
716	43T63319	HOLDER,SENSOR	1	1