



# 13. EXPLODED VIEWS AND PARTS LIST

## Indoor Unit

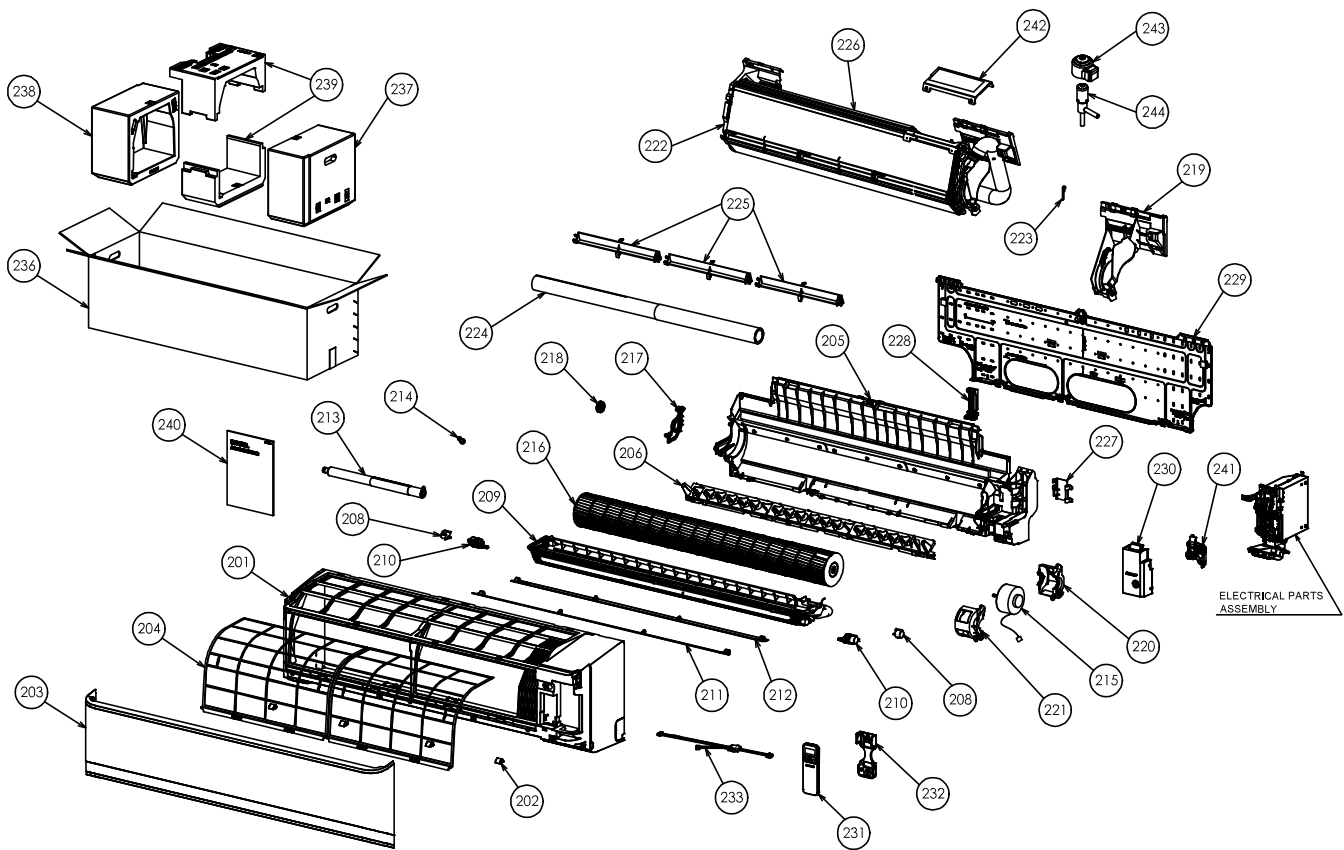

Location No.	Part No.	Description	Location No.	Part No.	Description
201	43T00842	FRONT PANEL ASSY	224	43T49381	PIPE, SHIELD
202	43T00771	CAP SCREW ASSY	225	43T49383	SEAL, FRONT
203	43T09571	GRILLE OF AIR INLET ASSY	226	43T49384	SEAL, UP
204	43T80356	AIR FILTER	227	43T49043	HOLDER, PIPE
205	43T03416	BACK BODY ASSY	228	43T49382	PIPE FIXTURE
206	43T22361	VERTICAL LOUVER ASSY	229	43T82345	PLATE, INSTALLATION ASSY
208	43T21527	MOTOR-LOUVER	230	43T62364	TERMINAL COVER ASSY
209	43T72374	DRAIN PAN ASSY	231	43T66324	WIRELESS REMOCO
210	43T2D303	GEAR ASSY	232	43T83305	HOLDER, REMOTE CONTROL
211	43T22362	HORIZONTAL LOUVER FRONT	233	43T60511	CORD MOTOR LOUVER HR
212	43T22363	HORIZONTAL LOUVER BACK	236	43T91385	PACKING BOX
213	43T70325	DRAIN HOSE ASSY	237	43T91382	PACKING CUSHION RIGHT
214	43T79322	DRAIN CAP	238	43T91383	PACKING CUSHION LEFT
215	43T21492	FAN-MOTOR	239	43T91384	PACKING CUSHION CENTER
216	43T20358	CROSS FLOW FAN ASSY	240	43T85824	OWNER'S MANUAL (MMK-UP0271,0301,0361HP-E)
217	43T39402	BASE BEARING ASSY	240	43T85825	OWNER'S MANUAL (MMK-UP0271,0301,0361HP-TR)
218	43T22312	BEARING ASSY, MOLD	241	43T62365	CLAMP BASE ASSY
219	43T39401	MOTOR COVER ASSY	242	43T04467	PMV COVER ASSEMBLY
220	43T39403	MOTOR BAND BACK	243	43T46519	COIL, PMV
221	43T39404	MOTOR BAND FRONT	244	43T46518	BODY, PMV
222	43T44736	REFRIGERATION CYCLE ASSY			
223	43T19333	HOLDER, SENSOR			

## Indoor Unit (Part-E)

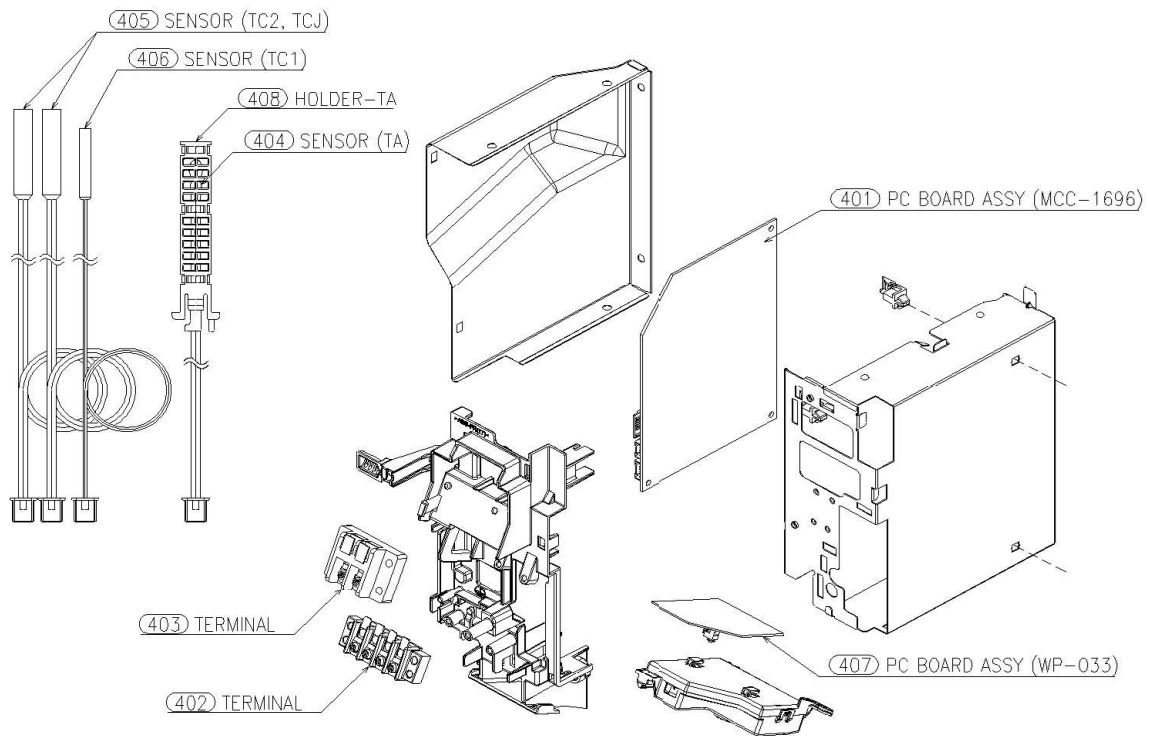

Location No.	Part No.	Description	Location No.	Part No.	Description
401	43TN9351	PC BOARD ASSY	405	43T50304	SENSOR;HEAT EXCHANGER
402	43T60448	TERMINAL	406	43T50317	SENSOR;HEAT EXCHANGER
403	43T60078	TERMINAL BLOCK	407	43T6V932	PC BOARD ASSY
404	43T50391	SENSOR; THERMOSTAT	408	43T63356	HOLDER-TA