



Installation

MaxiBlue

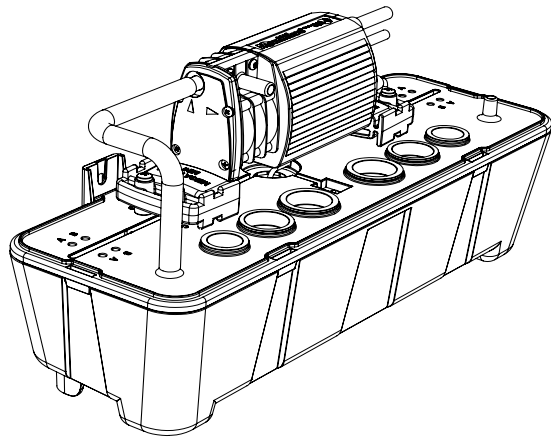

MegaBlue

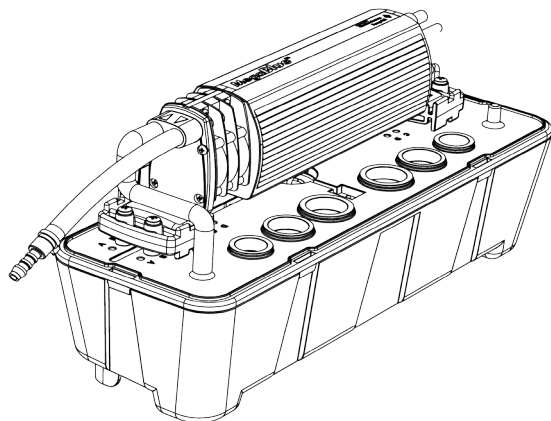

Cleaning & Maintenance

The BlueDiamond condensate removal pump will tolerate some dust and sludge. However, if the reservoirs or sensors require cleaning, use warm soapy water and take care not to damage the sensors.

After any cleaning or maintenance work, carry out an operational test before using the pump.

S30 612/1

Royston Road, Byfleet, Surrey, KT14 7NY, England/UK
Tel: +44 (0)1932 355277 Fax: +44 (0)1932 351285
Email: info@charlesausten.com
www.bluediamondpump.com

Manufactured by
Charles Austen
Pumps Ltd 

BlueDiamond™
The only fit and forget condensate pumps

Condensate Removal Pumps


MultiTank

Installation Instructions
MaxiBlue & MegaBlue



Manufactured by
Charles Austen
Pumps Ltd 



Assembly

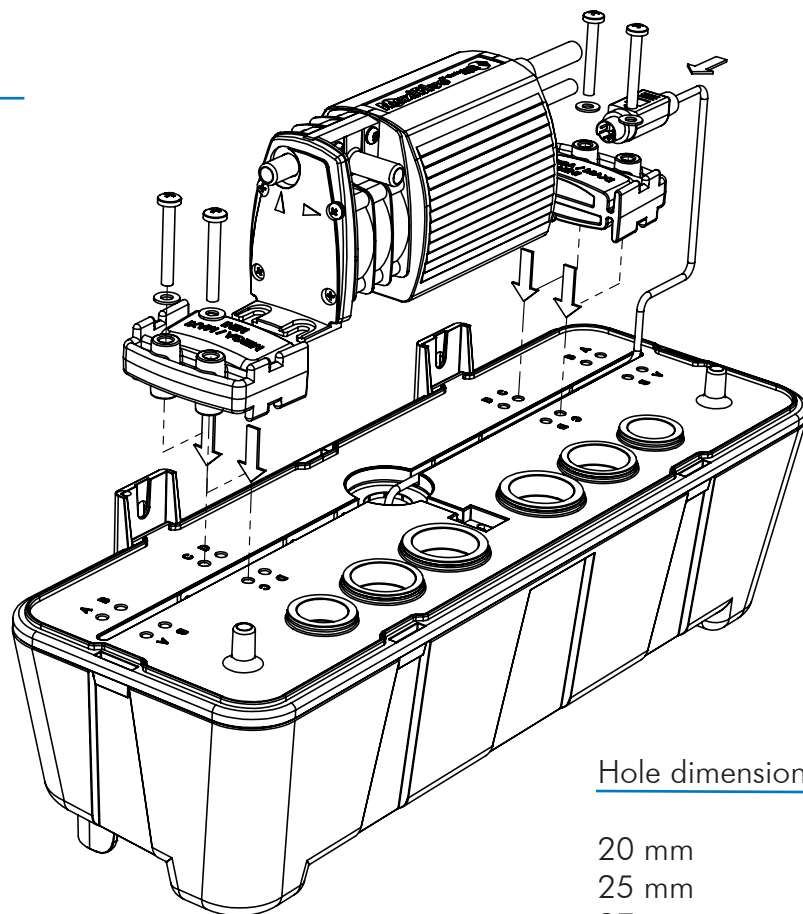

Hole dimensions

20 mm
25 mm
27 mm

Dimensions

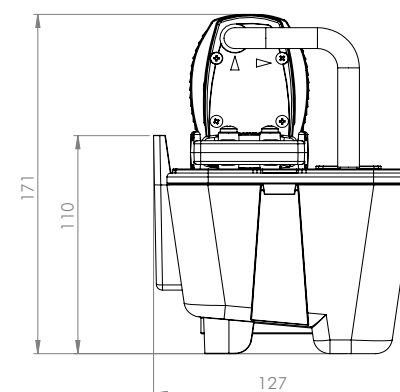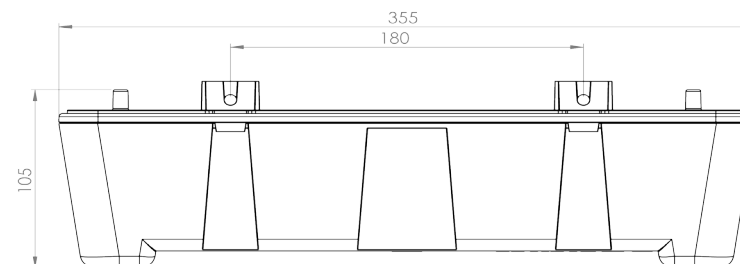

Safety Warnings

Always ensure MultiTank is secured and cannot be knocked over.
It is essential that MultiTank is installed level.
Never use for applications other than air conditioning condensate.
Do not use if product is damaged
For indoor use only
Temperature range 0-40 C
Do NOT attempt to pick up the MultiTank by holding the pump
Avoid damage to bead sensor when cleaning out Multitank